


# PIONEER CLASSIC/LITE

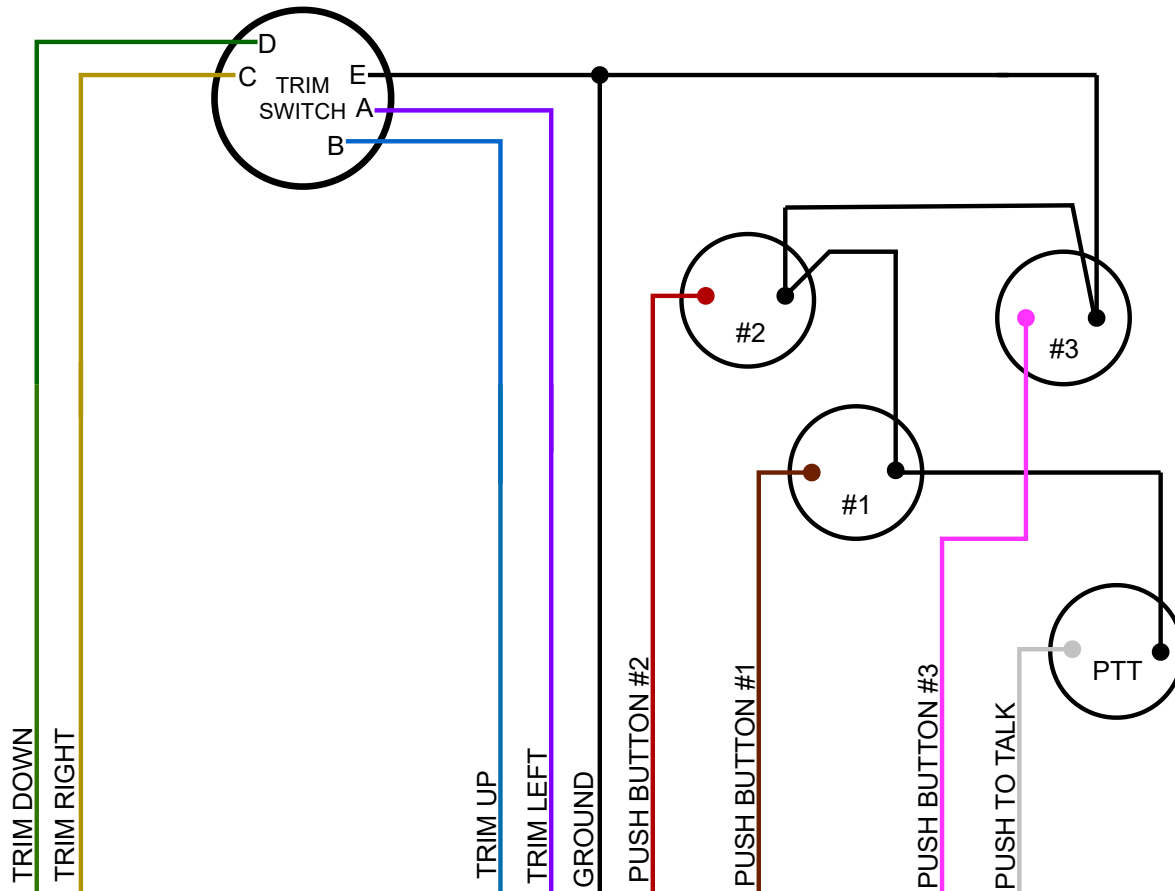

## INSTALLATION:

1. DRILL A 1/4" HOLE IN THE CONTROL STICK SHAFT APPROXIMATELY 4" DOWN FOR WIRE EXIT.
2. INSERT GRIP ON CONTROL STICK, ROUTING WIRES THROUGH 1/4" PREDRILLED HOLE. ENSURE WIRES ARE PROPERLY CHAFE PROTECTED. CONTROL STICK SHOULD PENETRATE GRIP AT LEAST 2".
3. POSITION GRIP FOR BEST COMFORT AND TIGHTEN SET SCREW, LOCATED ON FORWARD FACE OF GRIP USING 5/32" ALLEN WRENCH. DO NOT OVERTIGHTEN SET SCREW!  
(MAX TORQUE 12 IN LBS)
4. TERMINATE WIRING ACCORDING TO GUIDE.

ALL SWITCHES ARE NORMALLY OPEN, MOMENTARY, SWITCHING GROUND. CAP AND STOW ANY UNUSED WIRES.



## WE'RE HERE TO HELP!

FOR SUPPORT:  
541-604-9573  
PIONEERCONTROLGRIPS@GMAIL.COM

**PCG**  
PIONEER CONTROL GRIPS



